

Completely pre-assembled Signal Towers / RST 56

RST56 Built-In 24V WH/BU/GN/YE/RD/Buzzer



Part No.: 686.593.15 Series: RST 56



MECHANICAL DATA	
Length	289 mm
Diameter	57 mm
Materials	ABS PC
Dome colour	White
Housing colour	Black
Protection category	IP65 IP69K
Connection	M12 socket 8-pole
Type of fixing	Built-in mounting
Working temperature minimum	-30°C
Working temperature maximum	+50°C
Weight with packaging	358.4 g
Product weight	319.4 g
IK-Code (IEC 62262)	IK05

ELECTRICAL DATA		
Operating voltage	24V	
Operating voltage type	DC	
Operating voltage tolerance	+/- 10%	
Rated operational voltage	24 VDC	
Protection class	Protection class 3	
Pollution degree	3	

OPTICAL DATA	
Light source	LED
Light colour	Blue Green Red White Yellow
Optical signal image	Permanent
Service life optical	50,000 h maximum

ACOUSTIC DATA	
Volume (max) at 1m distance	90
Acoustic signal image	Continuous tone
Number of tones	1 tone
Audio frequency	2900 Hz
Acoustic service life	5,000 h minimum

For additional installation and mounting information, refer to the appropriate user guide at www.werma.com. This printed copy is for information only and is subject to alteration.



Completely pre-assembled Signal Towers / RST 56

RST56 Built-In 24V WH/BU/GN/YE/RD/Buzzer


APPROVAL DATA		
Conforms with CE	Yes	
Conforms with RoHS directive	Yes	
WEEE	Yes	
Conforms with ATEX-directive	No	
Conforms with CCC-Ex	No	
Conforms with CCC	No	
Conforms with UL	No	
Conforms with FCC	No	
Conforms with IC	No	
EAC certificate available	No	
Conforms with UKCA (Importer)	Yes (WERMA (UK) Ltd.)	
Conforms with CMIM	No	
Conforms with AS-I	No	
Conforms with DNV	No	
Conforms with RoHS CN	10 years	
Conforms with VdS	No	

For additional installation and mounting information, refer to the appropriate user guide at www.werma.com. This printed copy is for information only and is subject to alteration.



Completely pre-assembled Signal Towers / RST 56

RST56 Built-In 24V WH/BU/GN/YE/RD/Buzzer

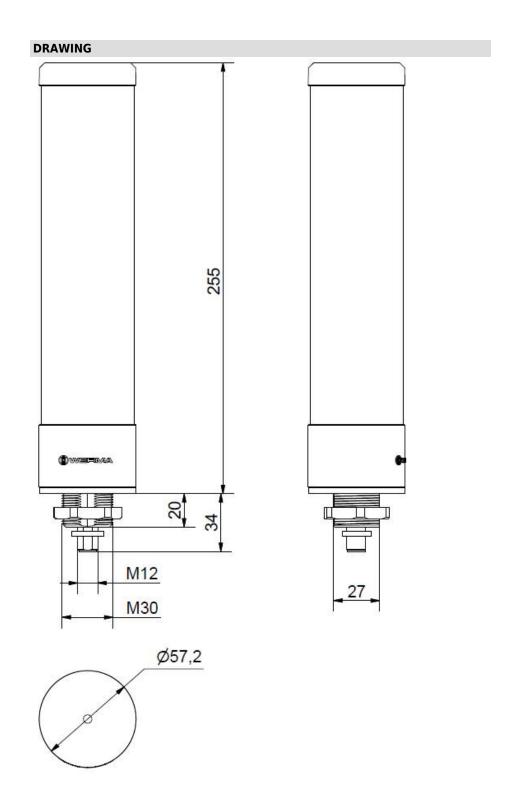

For additional installation and mounting information, refer to the appropriate user guide at www.werma.com. This printed copy is for information only and is subject to alteration.