

Maxi free-standing Beacons / Revolving Signal Light 884 Rotating Beacon Fresnel 24VAC/DC RD



Part No.: 884.130.75



MECHANICAL DATA

MECHANICAL DATA	
Height	218 mm
Diameter	142 mm
Materials	PC PC/ABS
Dome colour	Red
Housing colour	Black
Protection category	IP65
Connection	Screw terminals
cross-sectional area maximum	1,50mm² / 16AWG
Cable entry	Rubber pinch
Cable entry minimum	d = 5 mm
Cable entry maximum	d = 7 mm
Tension relief	Pull-out protection
Type of fixing	Base mounting
Working temperature minimum	-30°C
Working temperature maximum	+50°C
Weight with packaging	761 g
Product weight	672 g
ELECTRICAL DATA	
Operating voltage	24V
Operating voltage type	AC/DC
Operating voltage frequency	50Hz
Operating voltage tolerance	+/- 10%
Rated operational voltage	24 VDC
Rated operational current	250 mA
Rated inrush current	2600 mA
Protection class	Protection class 2
Pollution degree	3
Overvoltage category	Ш
OPTICAL DATA	
Light source	LED
Light colour	Red
Optical signal image	Revolving
a 1 114 11 1	

50,000 h minimum

60 U/min

APPROVAL DATA

Service life optical Rotation speed (rpm)

1

For additional installation and mounting information, refer to the appropriate user guide at www.werma.com. This printed copy is for information only and is subject to alteration.


Maxi free-standing Beacons / Revolving Signal Light 884 Rotating Beacon Fresnel 24VAC/DC RD

Conforms with CE	Yes
Conforms with RoHS directive	Yes
WEEE	Yes
Conforms with ATEX-directive	No
Conforms with CCC-Ex	No
Conforms with CCC	No
Conforms with UL	No
Conforms with FCC	No
Conforms with IC	No
EAC certificate available	Yes
Conforms with UKCA (Importer)	Yes (WERMA (UK) Ltd.)
Conforms with CMIM	No
Conforms with AS-I	No
Conforms with DNV	No
Conforms with RoHS CN	No
Conforms with VdS	No

Provide the appropriate user guide at www.werma.com. This printed copy is for information only and is subject to alteration.

ļ

Maxi free-standing Beacons / Revolving Signal Light 884 Rotating Beacon Fresnel 24VAC/DC RD

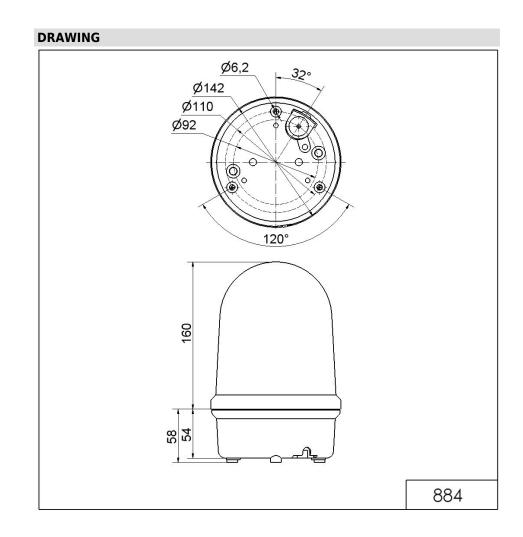

For additional installation and mounting information, refer to the appropriate user guide at www.werma.com. This printed copy is for information only and is subject to alteration.